

Sleeper Shift Prevention Fitting

Shift Prevention Fitting for PC Sleeper

- Can be installed only by Box-wrench, without drilling the sleepers.
- Can be installed with irregular space of sleepers.



For End-portion,
Without joint bar.



For Connection-part,
With joint bar.

Shift Prevention Fitting for Turn-out Sleeper


- Can be installed only by Box-wrench, without drilling the sleepers.
- Can be installed with irregular space of sleepers.



For End-portion,
Without joint bar.



For Connection-part,
With joint bar.

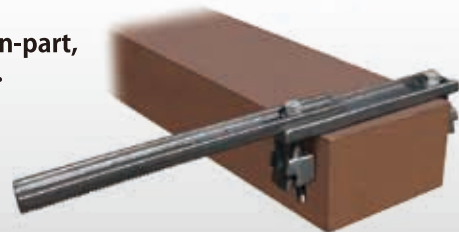

Precaution at the time of installation:

Please check the soundness of installation spot of sleeper before installation.

Please note that if sleeper have defect or abnormal shape, enough shift prevention effects can not be obtained.